

STORM



ΛΕΜΟΝΟΣΤΙΦΤΗΣ 40W | CITRUS JUICER 40 W | 06-11611

Οδηγίες Χρήσης | Instructions Manual
Ελληνικά (GR) | English (EN)

Αγαπητέ Καταναλωτή,

Σας ευχαριστούμε για την αγορά της συσκευής Storm.

Στο παρόν εγχειρίδιο θα βρείτε αναλυτικές οδηγίες χρήσης του προϊόντος.

Ευχόμαστε να απολαύσετε τη νέα σας συσκευή!

Dear Customer,

Thank you for purchasing an Storm appliance.

In the manual you will find product instructions.

We hope you will enjoy your new appliance!

ΕΛΛΗΝΙΚΑ (GR)

ΣΗΜΑΝΤΙΚΟ

Διαβάστε προσεκτικά τις οδηγίες πριν ενεργοποιήσετε τη συσκευή και φυλάξτε τις για μελλοντική αναφορά. Η μη τήρηση των οδηγιών θα μπορούσε να οδηγήσει σε ατύχημα. Καθαρίστε όλα τα μέρη του προϊόντος που θα έρθουν σε επαφή με τρόφιμα, όπως ενδείκνυται στο κεφάλαιο καθαρισμού πριν τη χρήση.


ΠΡΟΕΙΔΟΠΟΙΗΣΗ

- 01.** Μην χρησιμοποιείτε τη συσκευή εάν το καλώδιο ή το βύσμα είναι φθαρμένα.
- 02.** Βεβαιωθείτε ότι η τάση που ενδείκνυται στην ετικέτα αξιολόγησης ταιριάζει με την κύρια τάση προτού συνδέσετε τη συσκευή.
- 03.** Το καλώδιο της συσκευής πρέπει να εφαρμόζει στην πρίζα κατάλληλα. Μην αλλάζετε το καλώδιο. Μην χρησιμοποιείτε αντάπτορες.
- 04.** Μην χρησιμοποιείτε ή αποθηκεύετε τη συσκευή σε εξωτερικό χώρο.
- 05.** Μην χρησιμοποιείτε τη συσκευή εάν έχει πέσει στο πάτωμα, ή εάν έχει ορατά σημάδια φθοράς ή διαρροής.
- 06.** Μην πιάζετε το καλώδιο σύνδεσης στο ρεύμα. Μην χρησιμοποιείτε ποτέ το καλώδιο για να σκώσετε, κουβαλήσετε ή αποσυνδέσετε τη συσκευή.
- 07.** Βεβαιωθείτε ότι το ηλεκτρικό καλώδιο δεν βρίσκεται παγιδευμένο ή μπερδεμένο.
- 08.** Ελέγξτε την κατάσταση του ηλεκτρικού καλωδίου. Φθαρμένα ή μπερδεμένα καλώδια αυξάνουν τον κίνδυνο ηλεκτροπληξίας.
- 09.** Μην αγγίζετε το καλώδιο με βρεγμένα χέρια.
- 10.** Η συσκευή δεν πρέπει να χρησιμοποιείται από άτομα με ειδικές ανάγκες (σωματικές ή διανοητικές), παιδιά ή άτομα που δε διαθέτουν την απαιτούμενη γνώση και εμπειρία για τη χρήση της συσκευής, χωρίς την επιτήρηση κάποιου προσώπου που γνωρίζει τον τρόπο λειτουργίας της συσκευής και θα είναι υπεύθυνος για την ασφάλειά τους.
- 11.** Τα παιδιά πρέπει να επιβλέπονται έτσι ώστε να καταστεί σίγουρο πως δεν παίζουν με τη συσκευή.
- 12.** Εάν το καλώδιο παροχής είναι φθαρμένο, πρέπει να αντικατασταθεί από τον κατασκευαστή, τον αντιπρόσωπο υπηρεσιών ή παρόμοιους εξειδικευμένους ανθρώπους προκειμένου να αποφευχθεί ο κίνδυνος.

ΜΕΡΗ ΤΟΥ ΑΠΟΧΥΜΩΤΗ

06-11611 & 06 - 11628 (40W)

1. Προστατευτικό κάλυμμα
2. Κώνος πορτοκαλιού
3. Κώνος λεμονιού
4. Φίλτρο
5. Άξονας μετάδοσης κίνησης
6. Δοχείο
7. Βάση κινητήρα

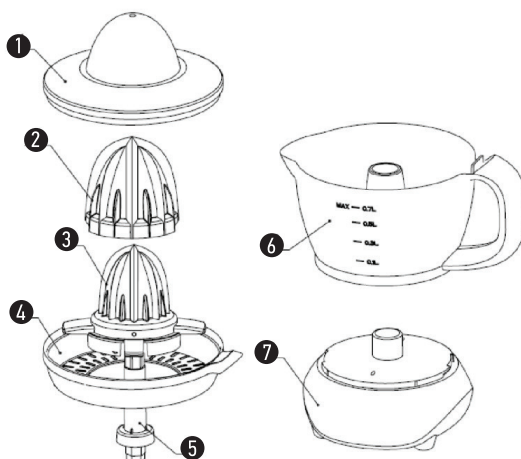

ΧΡΗΣΗ ΚΑΙ ΦΡΟΝΤΙΔΑ

- 01.** Ξετυλίξτε τελείως το καλώδιο της συσκευής πριν από κάθε χρήση.
- 02.** Μην αναποδογυρίζετε τη συσκευή ενώ βρίσκεται σε λειτουργία ή όταν είναι συνδεδεμένη στην πρίζα.
- 03.** Αποσυνδέστε τη συσκευή από την πρίζα όταν δεν είναι σε λειτουργία και πριν οποιαδήποτε διαδικασία καθαρισμού.
- 04.** Αυτή η συσκευή είναι μόνο για οικιακή χρήση, όχι για επαγγελματική ή βιομηχανική χρήση.
- 05.** Αυτή η συσκευή δεν είναι παιχνίδι. Τα παιδιά πρέπει να επιβλέπονται έτσι ώστε να καταστεί σίγουρο ότι δεν παίζουν με τη συσκευή.
- 06.** Αυτή η συσκευή προορίζεται για χρήση από ενήλικες. Βεβαιωθείτε ότι αυτό το προϊόν δε χρησιμοποιείται από ανθρώπους με ειδικές ανάγκες, παιδιά ή ανθρώπους χωρίς πείρα.
- 07.** Αυτή η συσκευή πρέπει να αποθηκεύεται μακριά από παιδιά και/ή από ανθρώπους με ειδικές ανάγκες.
- 08.** Μην αποθηκεύετε τη συσκευή σε κάθετη θέση.
- 09.** Αποθηκεύστε τη συσκευή σε στεγνό μέρος, μακριά από σκόνη και ηλιακή ακτινοβολία.
- 10.** Ποτέ μην αφήνετε τη συσκευή χωρίς επίβλεψη ενώ βρίσκεται σε λειτουργία.
- 11.** Οποιαδήποτε κατάχρηση ή αποτυχία στην ακολουθία των οδηγιών χρήσης καθιστά την εγγύηση άκυρη.

ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ

- 01.** Ξετυλίξτε το καλώδιο τελείως πριν συνδέσετε τη συσκευή.
- 02.** Συνδέστε τη συσκευή στην πρίζα.
- 03.** Κόψτε τα εσπεριδοειδή που θέλετε να στύψετε στη μέση.
- 04.** Ενεργοποιήστε τη συσκευή πιέζοντας τα κομμάτια των φρούτων, αφότου τα τοποθετήσετε στον κώνο στυψίματος.
- 05.** Για να σταματήσετε τη συσκευή, αρκεί να σταματήσετε να ασκείτε πίεση στον κώνο στυψίματος.
- 06.** Αφαιρέστε και τον κώνο και το φίλτρο για να αδειάσετε το δοχείο.
- 07.** Βάλτε το χυμό από το δοχείο σε ποτήρια και σερβίρετε απευθείας.
- 08.** Εάν επεξεργάζεστε μεγάλη ποσότητα φρούτων, πρέπει περιοδικά να καθαρίζετε το φίλτρο και να αφαιρείτε τα υπολείμματα πολτού.

ΚΑΘΑΡΙΣΜΟΣ

- 01.** Αποσυνδέστε τη συσκευή από την πρίζα και αφήστε τη να κρυώσει προτού ξεκινήσετε το καθαρισμό.
- 02.** Εκτός από τη μονάδα ισχύος και τη βάση, όλα τα υπόλοιπα κομμάτια μπορούν να καθαριστούν με απορρυπαντικό και νερό ή υγρό πιάτων. Ξεπλύνετε σχολαστικά για να αφαιρέσετε όλα τα ίχνη απορρυπαντικού.
- 03.** Καθαρίστε τον εξοπλισμό με ένα βρεγμένο ύφασμα και λίγες σταγόνες υγρού πιάτων και έπειτα στεγνώστε.
- 04.** Μην χρησιμοποιείτε διαλύτες, ή προϊόντα με όξινο ή βασικό pH όπως το λευκαντικό, ή λειαντικά προϊόντα, για να καθαρίσετε τη συσκευή.
- 05.** Μην βυθίζετε τη συσκευή σε νερό ή κάποιο άλλο υγρό, και μην την τοποθετείτε κάτω από ανοιχτή βρύση.
- 06.** Ενδείκνυται να καθαρίζετε τη συσκευή συχνά και να αφαιρείτε όποια υπολείμματα φαγητού.
- 07.** Τα ακόλουθα μέρη μπορούν να καθαριστούν στο πλυντήριο πιάτων: Προστατευτικό κάλυμμα, Κώνος, Φίλτρο, Δοχείο.

ΤΕΧΝΙΚΑ ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ:

Μοντέλο: 06-11611

Τάση: 220-240V~50-60Hz

Ισχύς: 40 Watts

According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available. In order to fulfill ruling UNE EN-60335, we indicate that if the flexible wire is damaged, it can only be substituted by a technical service recognized by authorised organization, as per special tooling is required.



ENGLISH (EN)

IMPORTANT

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section before use.


WARNING

- 01.** Do not use the appliance if the cable or plug is damaged.
- 02.** Ensure that the voltage indicated on the rating label matches the mains voltage before plugging in the appliance.
- 03.** The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- 04.** Do not use or store the appliance outdoors.
- 05.** Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- 06.** Do not force the electrical connection wire. Never use the electric wire to lift up, carry or unplug the appliance.
- 07.** Ensure that the electric cable does not get trapped or tangled.
- 08.** Check the state of the electric cable. Damaged or knotted cables increase the risk of electric shock.
- 09.** Do not touch the plug with wet hands.
- 10.** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 11.** Children should be supervised to ensure that they do not play with the appliance.
- 12.** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CITRUS JUICER PARTS

06-11611 & 06 - 11628 (40W)

1. Protective cover
2. Orange cone
3. Lemon cone
4. Filter
5. Transmission shaft
6. Jug
7. Motor base

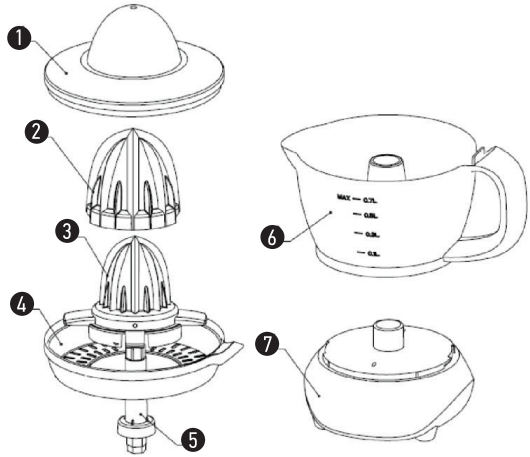

USE AND CARE

- 01.** Fully unroll the appliance's power cable before each use.
- 02.** Do not turn the appliance over while it is in use or connected to the mains.
- 03.** Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.
- 04.** This appliance is for household use only, not professional or industrial use.
- 05.** This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- 06.** This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.
- 07.** This appliance should be stored out of reach of children and/or the disabled.
- 08.** Do not store the appliance in a vertical position.
- 09.** Store the appliance in a dry place, free from dust and out of direct sunlight.
- 10.** Never leave the appliance unattended while in use.
- 11.** Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

INSTRUCTIONS FOR USE

- 01.** Unroll the cord completely before plugging in.
- 02.** Connect the appliance to the mains.
- 03.** Cut the citrus fruit/s to be squeezed in half.
- 04.** Turn on the appliance by pushing down on the piece of citrus fruit, once it has been placed on the juicing cone.
- 05.** To stop the appliance, simply stop applying pressure to the cone.
- 06.** Remove both the cone and the filter to empty the jug.
- 07.** Pour juice out of the jug and into glasses to serve directly.
- 08.** If you process a large quantity of fruit, you must periodically clean the filter and remove the remains of the pulp.

CLEANING

- 01.** Unplug the appliance from the mains and let it cool before starting any cleaning.
- 02.** Except for the power unit and the mains connection, all the parts can be cleaned with detergent and water or in washing up liquid. Rinse thoroughly to remove all traces of detergent.
- 03.** Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- 04.** Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- 05.** Do not submerge the appliance in water or any other liquid, or place it under a running tap.
- 06.** It is advisable to clean the appliance regularly and remove any food remains.
- 07.** The following parts can be cleaned in the dishwasher: Protective cover, Cone, Filter, Jug

TECHNICAL INFORMATION:

Model No: 06-11611

Voltage and frequency: 220-240V~50-60Hz

Heating power: 40 Watts

According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available. In order to fulfill ruling UNE EN-60335, we indicate that if the flexible wire is damaged, it can only be substituted by a technical service recognized by authorised organization, as per special tooling is required.



ESTIA HOME ART A.E.

Εισαγωγή και Εμπορία Οικιακών Ειδών
Αναγεννήσεως, Θέση Ντρασσαριά, Ασπρόπυργος, 19300
Τηλ: 216 900 1064 | E-mail: info@estiahomeart.com
www.estiahomeart.com



ISO 9001:2015
ΕΠΙΣΤΑΣΙΣ ΣΕΡΤΙΦΙΚΑΤΟ
Certification



intertek
Your Quality Partner